

User Manual

9" Digital Picture Frame

WinBook

Tech Support

1-800-257-3434

Monday - Friday, 9am - 5pm EST & Saturday 9am - 5pm EST

See Your Dealer's Website

 
IPG's website provides information on the full range of services available to our customers. To view our website, please go to www.ipgproducts.com. The website is a hub of all information available to our customers, including the latest product information, technical support, training resources and more. We invite you to explore our website today. This website is available only in English. Other forms of technical support are available in Spanish, Portuguese, Indonesian or other languages upon request.

www.ipgproducts.com

©2012 IPG

Picture Frame Functions

1. IFT slider (down)
2. Remote sensor
3. Power button
4. FastEnter button
5. Return button
6. Navigation Clear button
7. Navigation Up button
8. Navigation Right button
9. Navigation Left button
10. Mute button
11. Sleep/Screen Off button
12. Hanging hole
13. Speaker
14. Encoder
15. (SAMSUNG) slot
16. USB port
17. DC jack
18. Headphone jack
19. Hole (optional)

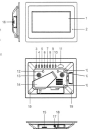

Remote Functions

1. Mute button
2. Mute button
3. Menu button
4. Navigation Up button
5. Navigation Left button
6. Enter button
7. Fast FWD & Previous button
8. Navigation Down button
9. Volume+ button
10. Mute button
11. Power button
12. Play/Pause button
13. Stop button
14. Navigation Right button
15. Fast FWD & Next button
16. Volume- button



Note: Encoder/Infrared sensor. We have built into along to ensure the best viewing experience.

Getting Started

Please read these instructions before you operate the picture frame.

Power Supply

Plug one end of the AC adapter into the DC input jack, then plug the other end into AC wall outlet.

Headphone Jack

For private listening, insert a telephone or earphone into the telephone jack.

CAUTION Listening at high volume could damage your ears.

USB Stick

Insert a USB flash drive into the USB port to enjoy audio files or pictures. When you need to unplug the USB flash drive, enter the main menu first, then unplug it.

SD/MMC/MS Memory Cards

Insert an SD/MMC card into the card slot to enjoy audio files or pictures.

Snooze/Alarm Off Button

To use the snooze option, lightly touch the SNOOZE/ALARM OFF button when the alarm goes on. The alarm will stop for several minutes, then come on again. Press and hold SNOOZE/ALARM OFF button about 3 seconds in normal mode to disable the alarm function. (The button works as described above only when the mode option is set to ALARM-enabled.)

Play/Pause Button

Press the PLAY/PAUSE button to pause during playback. Press the button again to resume the playback.

Basic Play

Power on the unit, then enter the main menu. The screen will display ten functions: Photo, Music, Photo & Music, News, Setup, Calendar, Clock, Alarm, Day/Date and Favorite.

Insert a USB flash drive or an SD/MMC/MS memory card first, then press one of the MAIN/ON buttons to select one of the following functions:

• Photo

Press one of the NAVIGATION buttons to select the Photo option. Press ENTER to confirm the selection. After the player reads into several seconds, it begins to automatically browse the picture one-by-one. When the photo is in Auto Play off mode, it enters Thumbnail mode directly.

During picture playing, press the STOP button and the Thumbnail mode menu will appear on the screen.

Thumbnail of each file: select the thumbnail by using one of the NAVIGATION buttons and press ENTER to play.

Rotate: Highlight the Rotate option and press **ENTER** to confirm, then enter the rotate mode. There are three options that appear at the bottom of the screen including Rotate, Flip and Return. Use the **NAVIGATION** button to select the picture you want to rotate, then press **ENTER** to rotate it. Select **Return** to return to the picture. Select **Return** to go back to the thumbnail mode.

Slide show: Select the slide show option to slide the pictures sequentially.

Press the **NAVIGATION LEFT** or **NAVIGATION RIGHT** button to rotate the picture clockwise or counter-clockwise respectively. Press and hold the **NAVIGATION LEFT** or **NAVIGATION RIGHT** button on the main unit to move the picture forward or backward.

Press the **STOP** button twice to return to the file manager.

Press the **NAVIGATION DOWN** button to flip the picture vertically.

Press the **NAVIGATION UP** button to flip the picture horizontally.

• Music

Press one of the **NAVIGATION** buttons to select music, then press **ENTER** to confirm the selection. A music menu appears on the screen and the player begins to play the file automatically. Use the **NAVIGATION UP/DOWN** button to highlight a desired file, then press **PLAY/PAUSE** to play selected file.

• Movie

Press one of the **NAVIGATION** buttons to select movies, then press **ENTER** to confirm. After the player reads it for several seconds, it begins to play the movie automatically. Press the **STOP** button to return to the main menu using the movie playback, press **PLAY/PAUSE** to resume playback. This unit supports H.264 format.

• Photo & Music

Press one of the **NAVIGATION** buttons to select the Photo & Music function and press **ENTER** to start slide show of the pictures and play the music files synchronously. During the picture sliding, press one of the **NAVIGATION** buttons to rotate or flip the picture.

• Calendar

Use one of the **NAVIGATION** buttons to select the Calendar function and press **ENTER** to confirm. The calendar will appear on the display. You can adjust the calendar by pressing one of the **NAVIGATION** buttons. Use the **NAVIGATION LEFT/RIGHT** button to adjust year, use the **NAVIGATION UP/DOWN** button to adjust the month, then press the **STOP** button to confirm. Use one of the **NAVIGATION** buttons to select the date and press **ENTER** to confirm. Exit by pressing the **MENU** button.

• Clock

Use one of the **NAVIGATION** buttons to select the Clock function and press **ENTER** to confirm. The current time, date, month, year and week will appear on the screen.

• Alarm

Use one of the **NAVIGATION** buttons to select one of the following Alarm functions:

ON/OFF: press the **NAVIGATION UP/DOWN** button to make a selection between the two options (ON/OFF)

Set time when the alarm is set: Use the **NAVIGATION UP/DOWN** button to select **SET TIME** option and press **ENTER** to confirm. Use the **NAVIGATION LEFT/RIGHT** button to highlight the time desired, then use the **NAVIGATION UP/DOWN** button to adjust. Press the **NAVIGATION RIGHT** button to confirm and press **EXIT** to exit the alarm time set. The buzzer will sound at the pre-set warnings.

Exit: select exit option to exit alarm setting.

• Copy/Delete

Use one of the **NAVIGATION** buttons to select the Copy/Delete function and press **ENTER** to confirm. Select **COPY** or **DELETE** to enter the corresponding window to do the file copy or the delete function.

Copy function: when the Copy function is selected, all JPEG files on the USB flash drive or memory card will be displayed in the file manager. Use the **NAVIGATION UP/DOWN** buttons to select the files and press **ENTER** to confirm. The selected file will be highlighted in a rectangle frame. When the selection is finished, use one of the **NAVIGATION** buttons to select **SAVE** to save the selected files to the internal memory of the unit.

Delete function: when the Delete function is selected, all JPEG files you have saved will be displayed. Use one of the **NAVIGATION** buttons to select the files you want to delete from the internal memory and press **ENTER** to confirm. The file you have selected will be deleted.

Delete all: press one of the **NAVIGATION** buttons to select **DELETE ALL** in the bottom menu. All the files in the internal memory will be deleted.

• Sort

To sort, use one of the **NAVIGATION** buttons to select the file you want to move and press **ENTER** to confirm. Press the **NAVIGATION LEFT** button to move the picture up in the sequence. (For example, move its sequence from 3rd position to 2nd position.) Press the **NAVIGATION RIGHT** button to move the picture down in the sequence. (For example, move its sequence from 3rd position to 4th position.)

Press one of the **NAVIGATION** buttons to select **RETURN** to return to the edit mode. Select **TO GO SHOW** to browse the pictures one by one.

NOTE: The copying process may take some time to finish. Larger files will take more time. Do not remove the USB flash drive or memory card, or turn off the power while saving, deleting or sorting. It may cause data loss or damage the USB flash drive, memory card or internal memory.

• Playback

Use one of the **NAVIGATION** buttons to select the favorite option. It will begin to browse the files saved in the internal memory one by one. During the playback, press the **PLAY/PAUSE** button to pause. To resume playback, press the button again. Press one of the **NAVIGATION** buttons to rotate the picture. During the slide show, press the **STOP** button to enter the thumbnail mode. Exit by pressing the **EXIT** button.

Setup

Select the Setup option to display the Setup menu. Use the **NAVIGATION UP/DOWN** buttons to select the desired item. Press the **NAVIGATION RIGHT** button and the sub-options for each item will appear on the right side of the screen.

• Photo Setting

Interval time: browse and set a picture at one of the following interval times: 0.5 seconds, 10 seconds, 15 seconds, 30 seconds, 1 minute, 3 minutes. Tap photo effect: select one of the following effects when changing from low picture to another: no effect, cover up, cover down, cover left, cover right, uncover up, uncover down, uncover left, uncover right, wipe up, wipe down, wipe left, wipe right, push up, push down, push left, push right or random.

• Auto Play

The options for Auto Play include photo, music and movie.

• Display Setup

TVI brightness: to set TVI brightness until desired effect is reached.
TVI contrast: to set the TVI contrast until desired effect is reached.
TVI saturation: to set the TVI saturation until desired effect is reached.

• Custom Setup

OSD language: the OSD language options depends on the software.
Style: select one of following Setup menu styles: Style 1, Style 2, Style 3 or Style 4.
Repeat mode: select one of following options to do the repeat to review: off, ans, folder, all.
Default: select 'read' to restore the setting.

Set time: use the **NAVIGATION UP/DOWN** buttons to select the **SET TIME** option and press **OK** key confirm. Use the **NAVIGATION LEFT/RIGHT** buttons to highlight the time desired, then use the **NAVIGATION UP/DOWN** buttons to adjust. Press the **NAVIGATION END** button to confirm and press **ESC** key to exit the clock timer set.

• Exit

Select this option to exit the Setup menu.

Remote Functions

• Power button

Press this button to power on or off the unit.

• Menu button

Press the **MENU** button once to display the clock time. Press this button twice to display the calendar. Press this button three times to exit.

• Information

Press this button to display partial information (current file number, total number of files, current file name, another play time during movie

Playback modes

• **Mute**

Press the **MUTE** button during playback to return to the Main Menu.

• **Play/Pause button**

Press the **PLAY/PAUSE** button to pause/during playback. Press this button again to resume playback.

• **Navigation buttons**

Press one of the **NAVIGAT** instructions to select the desired items or rotate the picture during picture playback.

• **Enter button**

Press this button to confirm selections.

• **Stop**

Press the **STOP** button to stop during a playback. Press **PLAY/PAUSE** to resume playback.

• **Fast Forward/Previous**

Press this button once during play to skip a file or move a picture backward. Press and hold this button during normal playback of video or audio files to increase the playback speed cyclicly: **1X**, **4X**, **8X**, **16X**, **32X** or normal playback.

Press **PLAY** to resume normal playback.

• **Fast Reverse/Next**

Press this button once during play to skip a file or move a picture ahead. Press and hold this button during normal playback of video or audio files to increase the playback speed cyclicly: **1X**, **4X**, **8X**, **16X**, **32X** or normal playback.

Press **PLAY** to resume normal playback.

• **Menu**

Press the **MUTE** button and the audio output of the main unit shuts off. Press this button again or the **VOLUME** button to resume the audio output.

• **Volume + and Volume-**

Press the **Volume +** button to increase the volume. Press the **Volume-** button to reduce the volume.